


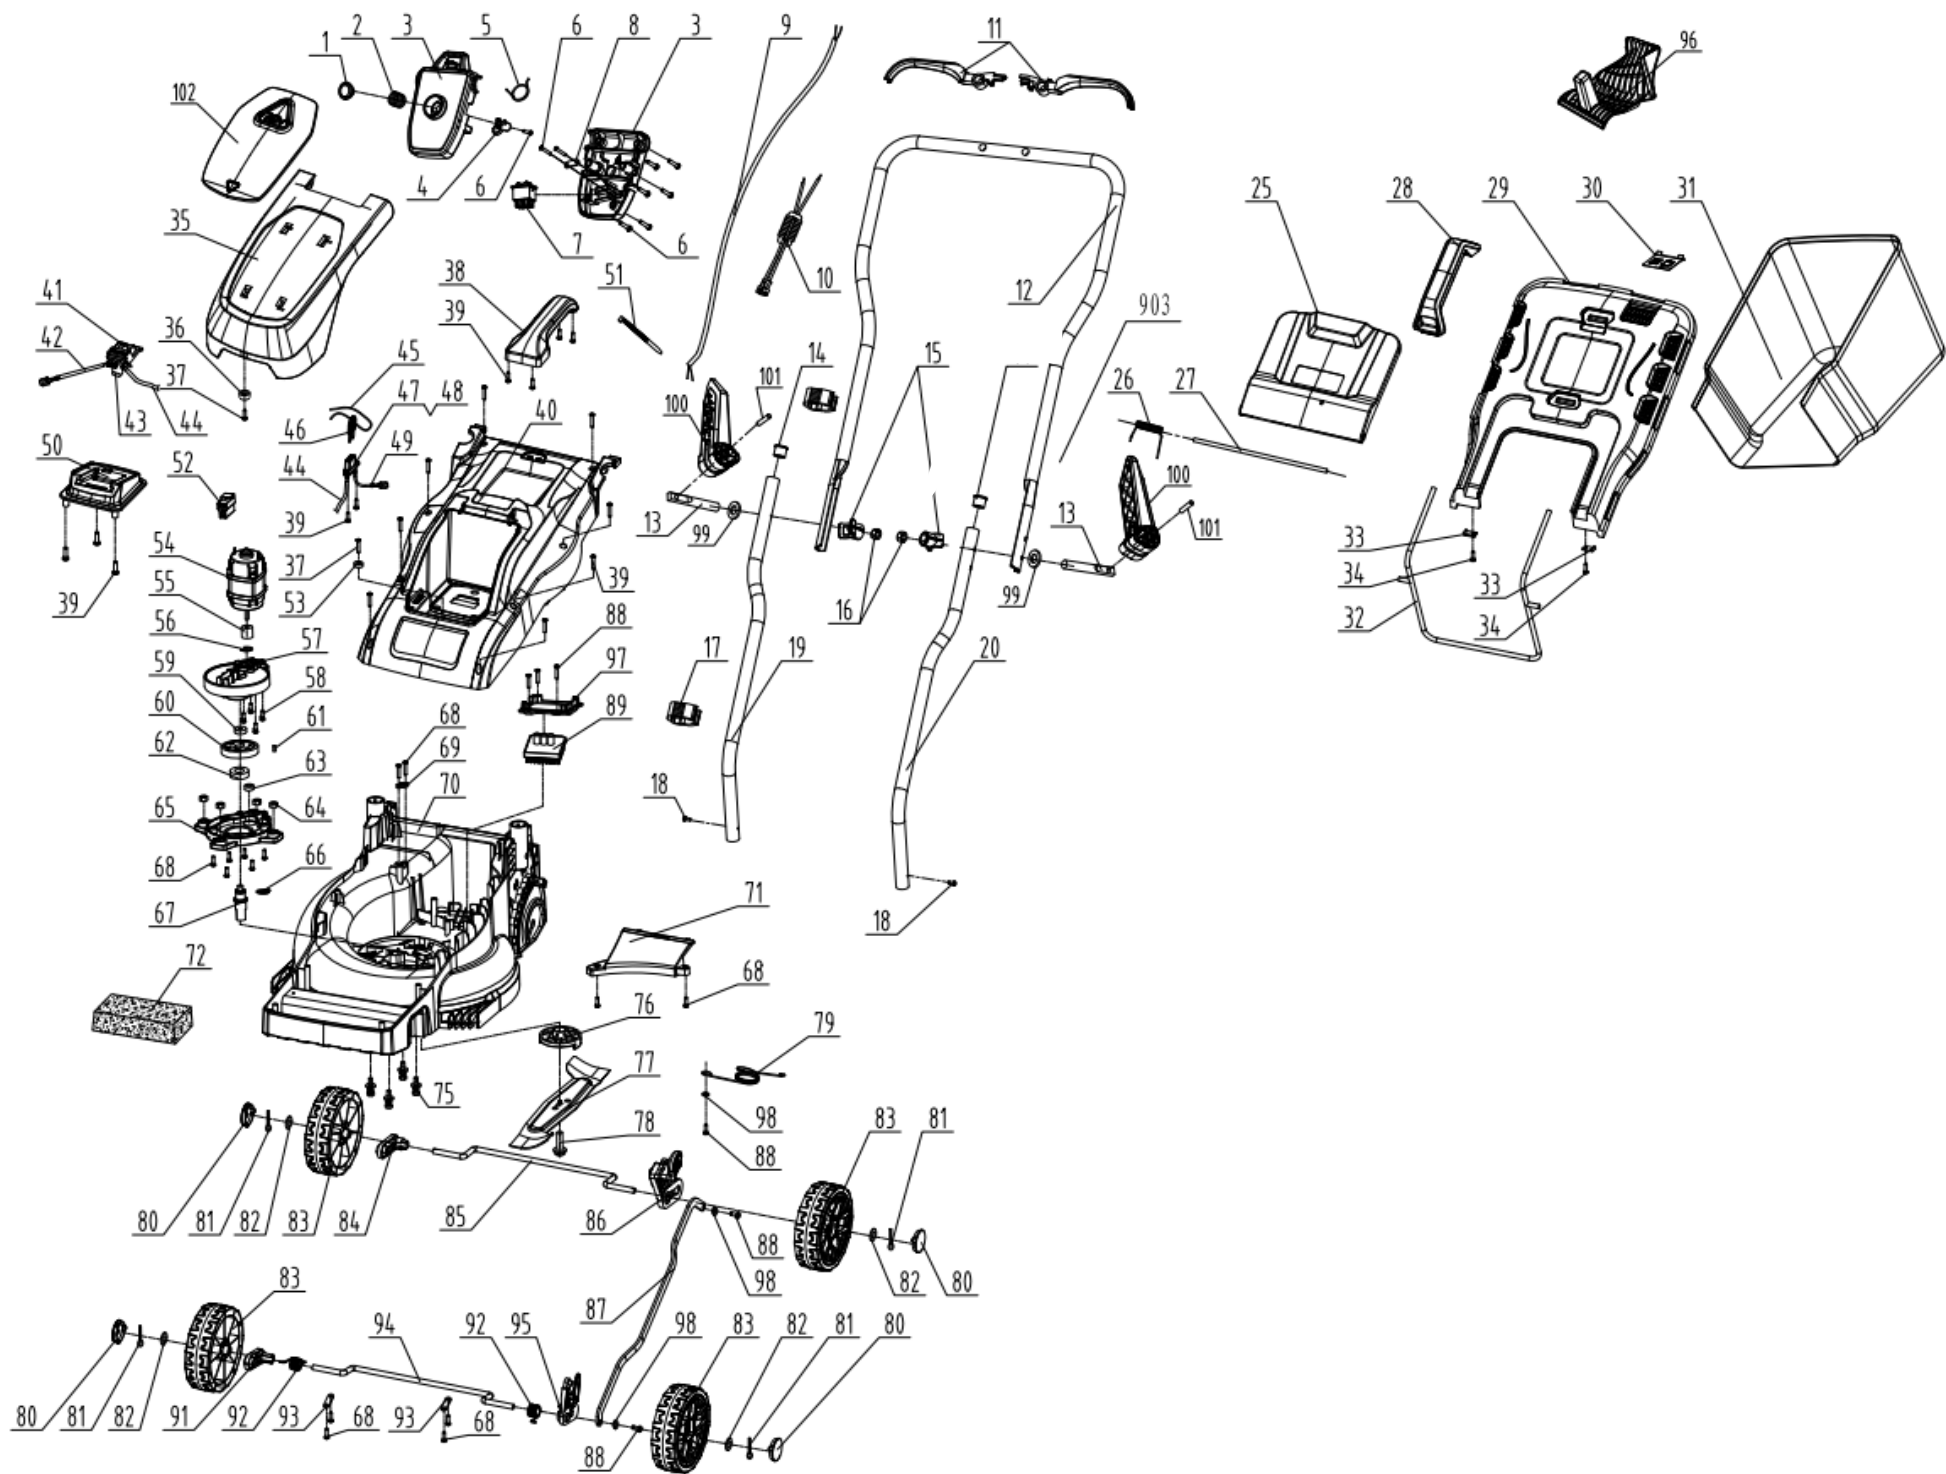

RALM 3320 SET			
Pozice	Obj.číslo	Popis	Počet
1	RALM3320-01	Switch button	1
2	RALM3320-02	Push button spring	1
3	RALM3320-03	Switch box upper and lower cover	1
4	RALM3320-04	Switch starter block	1
5	RALM3320-05	Switch torsion spring	1
6	RALM3320-06	Cross pan head flat end tapping screw	9
7	RALM3320-07	Switch	1
8	RALM3320-08	Mower press plate	1
9	RALM3320-09	Two core cable	1
10	RALM3320-10	Common mode choke	1
11	RALM3320-11	Left and right switch trigger	1
12	RALM3320-12	Top tube	1
13	RALM3320-13	Rod quickly adjust	2
14	RALM3320-14	Straw mower plug	2
15	RALM3320-15	Fixing block	2
16	RALM3320-16	M6 hexagon nut	2
17	RALM3320-17	Clip	2
18	RALM3320-18	Self tapping screw with cushion	2
19	RALM3320-19	Right thrust tube	1
20	RALM3320-20	Left thrust tube	1
25	RALM3320-25	Shield	1
26	RALM3320-26	Protective cover torsion spring	1
27	RALM3320-27	Shield rotating shaft	1
28	RALM3320-28	Quick insert handle	1
29	RALM3320-29	Trash cover	1
30	RALM3320-30	Indicating flap	1
31	RALM3320-31	Mesh bag	1
32	RALM3320-32	Litter basket support	1
33	RALM3320-33	Support clamp	2
34	RALM3320-34	Cross pan head flat end tapping screw	2
35	RALM3320-35	Mower battery cover	1
36	RALM3320-36	Transparent cover connector	1
37	RALM3320-37	Countersunk head tapping screw	2
38	RALM3320-38	Case handle	1
39	RALM3320-39	Cross pan head flat end tapping screw	17
40	RALM3320-40	Case top cover	1
41	RALM3320-41	M series integrated insert rack	1
42	RALM3320-42	1.5 square black line	1
43	RALM3320-43	680K resistance	1
44	RALM3320-44	1.5 square red line	1
45	RALM3320-45	Nylon cord	1
46	RALM3320-46	Security key	1
47	RALM3320-47	Key holder	1
48	RALM3320-48	Key seat plug	2
49	RALM3320-49	1.5 square red line	1
50	RALM3320-50	Battery pack holder	1
51	RALM3320-51	Ribbon	2

52	RALM3320-52	Two-core spring seat	2
53	RALM3320-53	Magnet	2
54	RALM3320-54	5030 brushless motor	2
55	RALM3320-55	Motor gear	1
56	RALM3320-56	95B steel wire stop ring	1
57	RALM3320-57	Gear box cover	1
58	RALM3320-58	Half-round head screw	4
59	RALM3320-59	Bearing	1
60	RALM3320-60	Rack wheel	1
61	RALM3320-61	Plain round head flat key	1
62	RALM3320-62	Bearing	1
63	RALM3320-63	Axle sleeve	1
64	RALM3320-64	Hex nut	4
65	RALM3320-65	Gear box bottom	1
66	RALM3320-66	Steel cable baffle ring	1
67	RALM3320-67	Output shaft	1
68	RALM3320-68	Cross pan head flat end tapping screw	14
69	RALM3320-69	Cable ramp	1
70	RALM3320-70	Main case	1
71	RALM3320-71	Chip damper	1
72	RALM3320-72	Counterweight sandbag (with plastic bag)	1
75	RALM3320-75	Outer hexagon three combination screws	4
76	RALM3320-76	Blade holder	1
77	RALM3320-77	Blade	1
78	RALM3320-78	Outer hexagon flange bolt	1
79	RALM3320-79	Height adjustment spring	1
80	RALM3320-80	Stifle	4
81	RALM3320-81	1.5MM cotter pin	4
82	RALM3320-82	Gasket 8	4
83	RALM3320-83	Wheel	4
84	RALM3320-84	Small rear wheel bracket	1
85	RALM3320-85	Rear axle shaft	1
86	RALM3320-86	Gear adjusting bracket	1
87	RALM3320-87	Gear adjusting lever	1
88	RALM3320-88	Cross pan head flat end tapping screw	6
89	RALM3320-89	95B brushless controller	1
91	RALM3320-91	Small front wheel bracket	1
92	RALM3320-92	Front wheel torsion spring	2
93	RALM3320-93	Axle clamp plate	2
94	RALM3320-94	Front axle	1
95	RALM3320-95	Big front wheel bracket	1
96	RALM3320-96	95 crumb	1
97	RALM3320-97	95B brushless controller holder	1
98	RALM3320-98	Gasket	3
99	RALM3320-99	Large gasket	2
100	RALM3320-100	93 trigger	2
101	RALM3320-101	55 lawn mower elastic pin	2
102	RALM3320-102	95C mower battery cover	1